

ICW SINGLE ARM ELITE


ICWUSA.com, Inc.

If you have any questions, please call 1-800-558-4435

DANGER!


The Elite arm contains high pressure gas springs. The following cautions **MUST** be observed to avoid serious injury.

1. Do not attempt to adjust your Elite arm until everything you intend to mount to the arm is mounted.
2. Arm must be completely horizontal (extended) before adjusting the arm's tension. Failure to do so will damage the arm and void the warranty.
3. **Never loosen or remove any of the shoulder bolts. Doing so will cause the arm to immediately come apart with tremendous force, and could cause serious injury.**
4. If equipment requiring AC power is mounted to this unit, have a certified electrician inspect the installation.
5. Failure to install this unit according to these instructions will void all ICW warranties. If installed incorrectly, ICW is not liable for any damage or injury caused by the unit.
6. Do not use power tools to adjust arm tension. **MUST** be adjusted by hand.

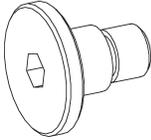

REMOVE ELITE ARM COVERS

TOP COVER: Remove the long arm cover by unscrewing the two 6-32 flathead screws in the center of the cover using a philips head screwdriver.

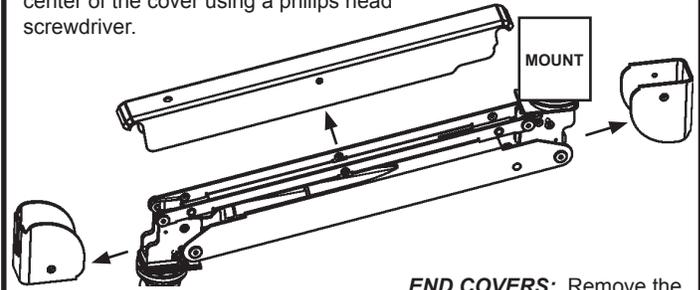


END COVERS: Remove the end covers by unscrewing the two 10-24 flathead screws using the 1/8" hex key.

IF USING CEILING MOUNT


MOUNT INLINE CEILING PLATE

Firmly secure ceiling mount to solid ceiling joist using four #14 wood screws found in hardware bag, being sure mount is level. Be sure to loosen set screw **BEFORE** attaching pipe.

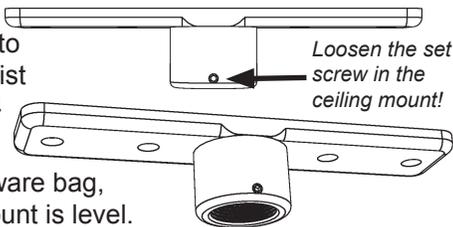


MOUNT SQUARE CEILING PLATE

Using four 1/4 x 2" lag bolt provided in hardware bag, secure ceiling mount to a solid wood surface or ceiling joist. Use square pattern or inline pattern, always being sure to use all 4 bolts. Run cords through center hole or the cord management port. Be sure to loosen set screw **BEFORE** attaching ceiling pipe.

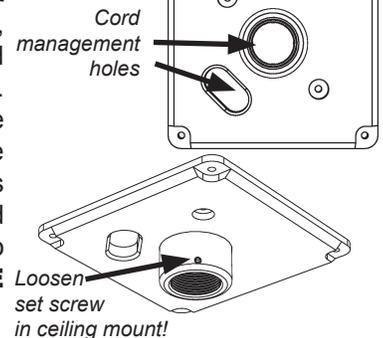

ATTACH PIPE TO CEILING PLATE


Thread pipe into ceiling mount and tighten set screw.

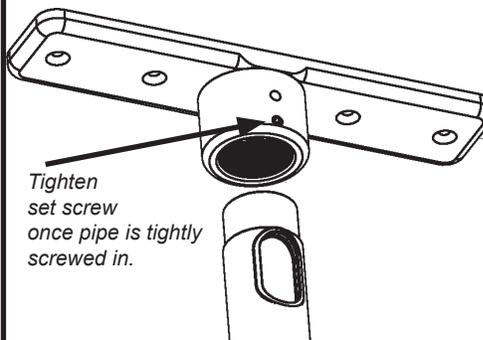

ATTACH PIPE TO ELITE ARM

Thread Elite onto extension pipe and tighten set screw.

Tighten set screw once Elite is tightly screwed in.

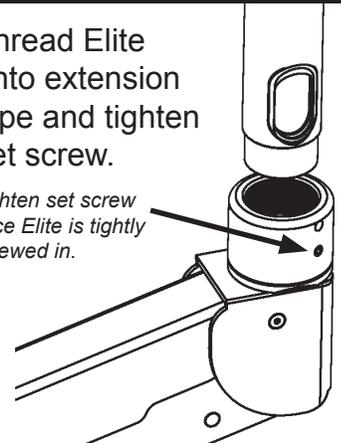


ICW SINGLE ARM ELITE

ICWUSA.com, Inc.

If you have any questions, please call 1-800-558-4435

IF USING POLE MOUNT


ATTACH POLEMOUNT TO POLE

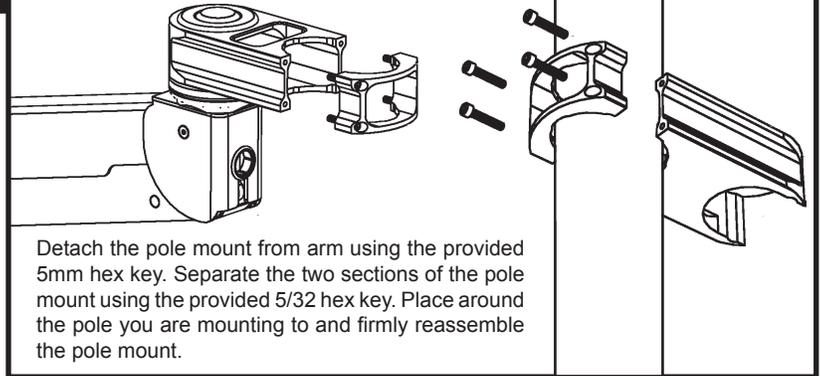

Detach the pole mount from arm using the provided 5mm hex key. Separate the two sections of the pole mount using the provided 5/32 hex key. Place around the pole you are mounting to and firmly reassemble the pole mount.

IF USING WALL MOUNT


REMOVE ELITE FROM WALL EAR

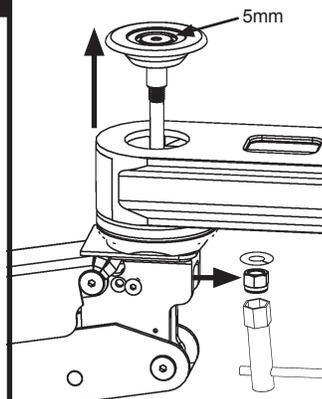

Remove end cover on end of Elite Arm under wall ear. Loosen 3/8 bolt with provided 5mm hex key while using provided 9/16 wrench to hold nylock nut as you loosen 3/8 bolt.

9/16 wrench (provided)

ATTACH PLATE TO EAR

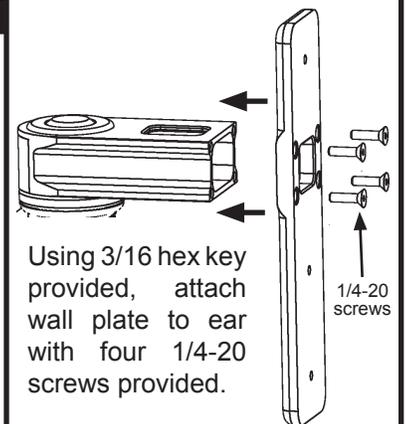


Using 3/16 hex key provided, attach wall plate to ear with four 1/4-20 screws provided.

1/4-20 screws


ATTACH WALL PLATE TO WALL

Locate stud and mark top hole, drill 11/64 pilot hole and insert #14 screw and tighten slightly. Using a level, mark lower hole and drill pilot hole, insert #14 screw and, with unit level, tighten both screws.

NOTE: ICW supplies #14 wood screws. If installing onto metal studs, you will need to replace with proper metal stud fasteners.

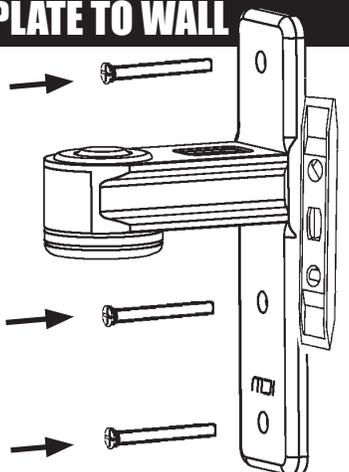

ATTACH ELITE TO WALL EAR

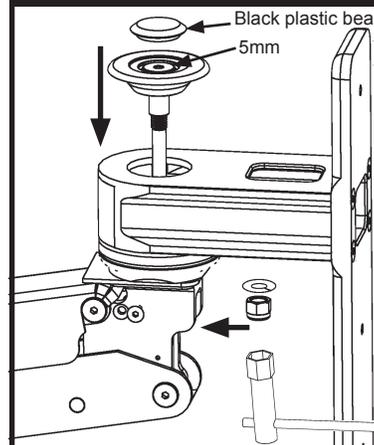

Pass 3/8 bolt with bearing assembly through wall mount ear and into end of Elite Arm. Secure Elite Arm under wall mount using split lock washer and nylock nut with 9/16 wrench provided and 5mm hex key.

9/16 wrench (provided)

ICW SINGLE ARM ELITE


ICWUSA.com, Inc.

If you have any questions, please call 1-800-558-4435

IF USING PARALINK


ATTACH KEYBOARD TO MONITOR

Attach the Paralink Keyboard Mount to the Monitor Mount by using the 3/8-16 screw and lock washer provided

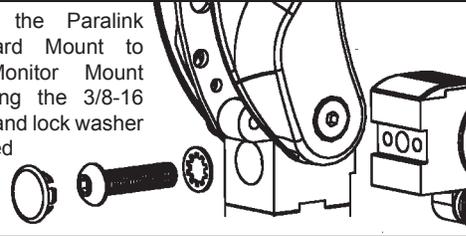


ATTACH VESA TO MONITOR

Using a phillips screw driver, attach the VESA plate to the back of your LCD monitor.

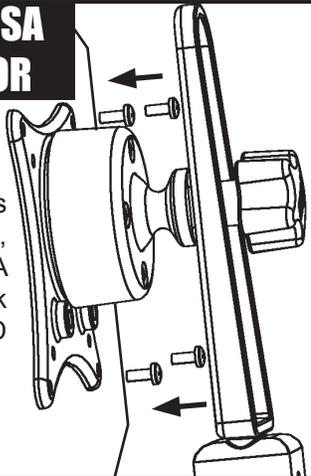

ATTACH PARALINK KEYBOARD TRAY


Attach the keyboard tray to the Keyboard Mount using the supplied 5/16-18 socket head screw.

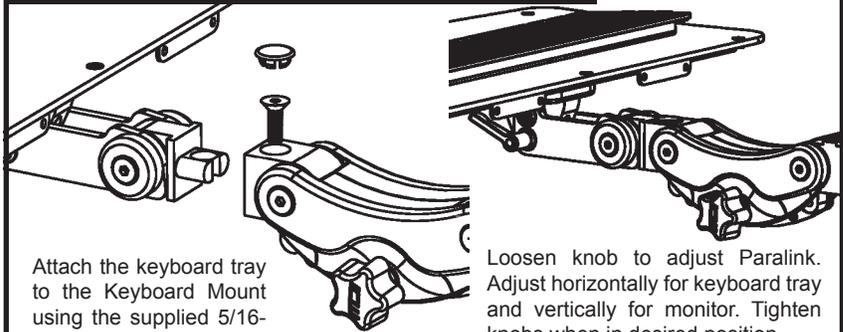

Loosen knob to adjust Paralink. Adjust horizontally for keyboard tray and vertically for monitor. Tighten knobs when in desired position.

ADJUST PARALINK TILT


Adjust Monitor to desired position with ball VESA. Tilt your monitor 50° in any direction. Adjust your monitor between portrait and landscape by rotating ball VESA. Adjust monitor depth by moving the paralink forward or back then tightening the depth adjustment knob.

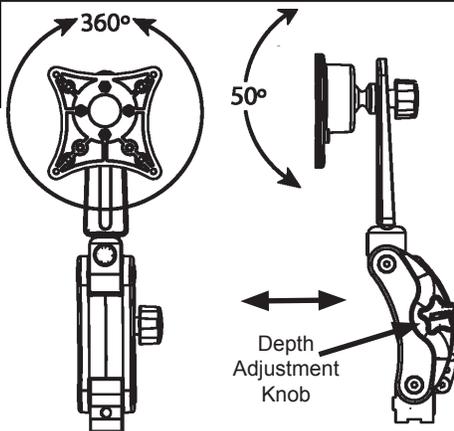

ADJUST BALL VESA TENSION & HEIGHT

Use the slider knob to loosen the slider to adjust the height of the monitor on the Paralink.

Adjust the pivot tension of the ball by gently and evenly tightening or loosening the four screws on the back of the ball VESA.

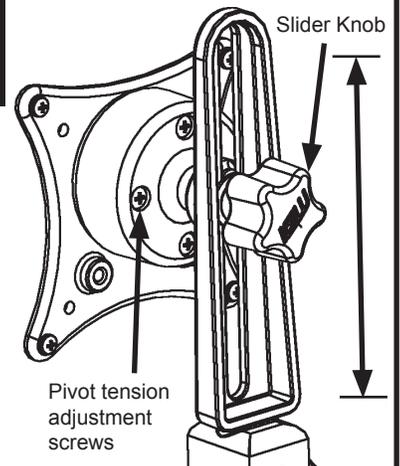

ICW SINGLE ARM ELITE


ICWUSA.com, Inc.

If you have any questions, please call 1-800-558-4435

IF USING QUICKLINK


ATTACH VESA TO MONITOR

Using a phillips screw driver, attach the VESA plate to the back of your LCD monitor.

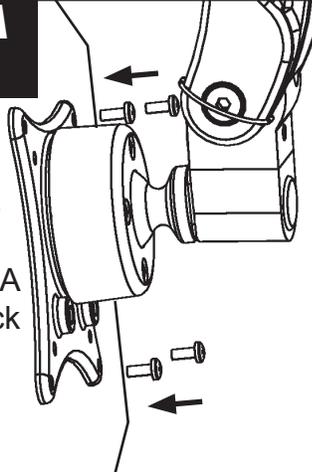


ADJUST QUICKLINK TILT

Adjust Monitor to desired position with ball VESA. Tilt your monitor 50° in any direction. Adjust your monitor between portrait and landscape by rotating ball VESA. Adjust monitor further by squeezing tilt buttons on back of Quicklink. Depressing either button will disengage the locking mechanism for the corresponding pivot providing 90 degrees of adjustment. Depressing both buttons at once allows the user to position both pivots simultaneously for a total of 180 degrees of adjustment.

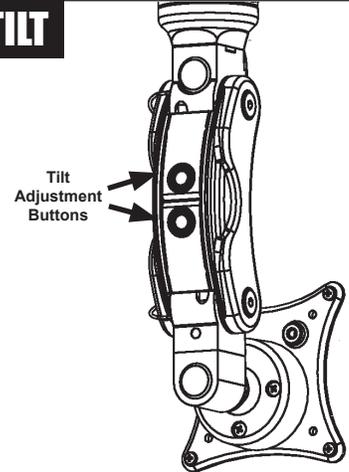



RUN CORDS THROUGH ARM

Run cords through Elite end frame and along cord channel.

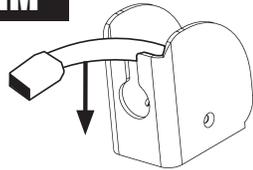


When you begin to place arm covers, slip cords through end cover cord ports.

Reattach black plastic bushing around exiting cords.

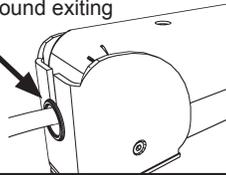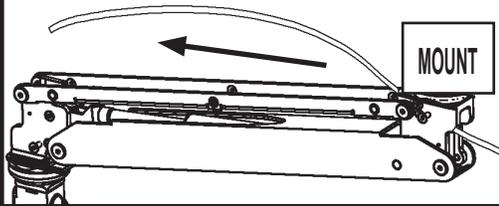


ATTACH ELITE ARM COVERS

TOP COVER: Attach the long arm cover by screwing the two 6-32 flathead screws in the center of the cover using a phillips head screwdriver. **DO NOT USE POWER TOOLS IN THIS STEP!**

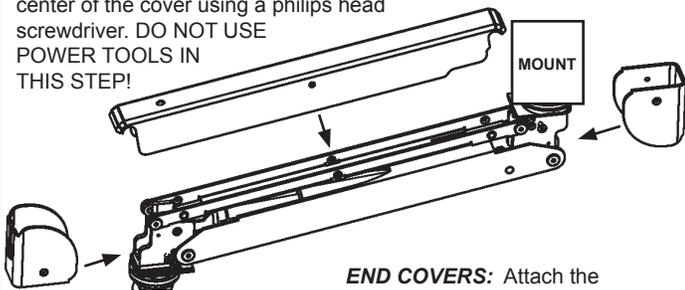

END COVERS: Attach the end covers by screwing the two 10-24 flathead screws using the 1/8" hex key. **DO NOT USE POWER TOOLS IN THIS STEP!**

ADJUST ELITE ARM RESISTANCE

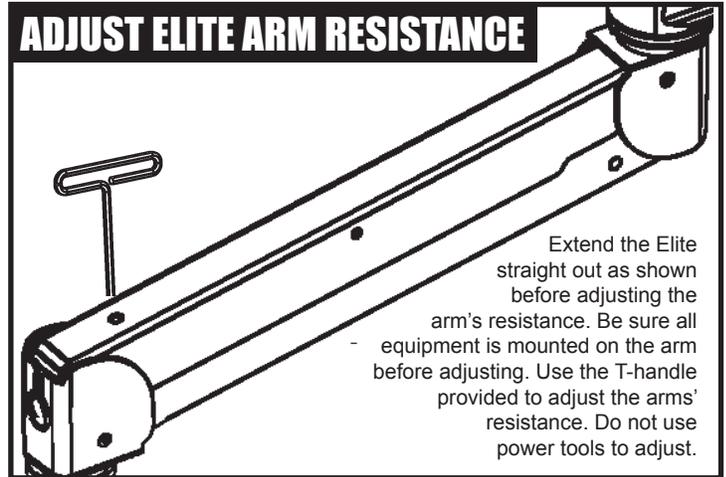

Extend the Elite straight out as shown before adjusting the arm's resistance. Be sure all equipment is mounted on the arm before adjusting. Use the T-handle provided to adjust the arms' resistance. Do not use power tools to adjust.