


ADJUST ELITE ARM

IMPORTANT!

The Elite MUST be fully extended before adjusting.

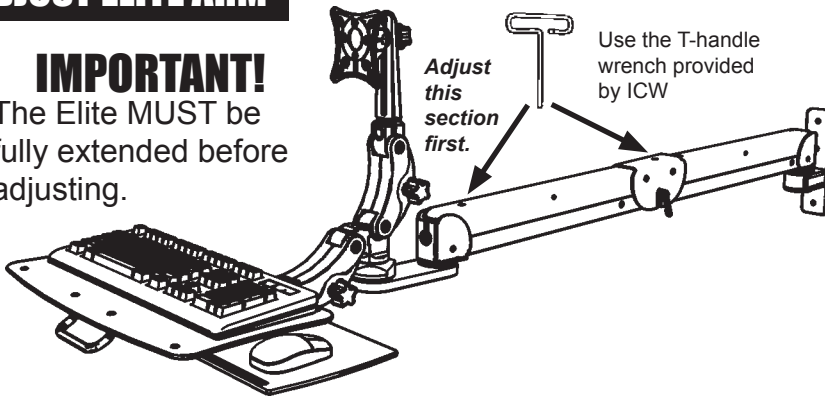


Extend the Elite straight out as shown before adjusting the arms resistance. Be sure all equipment is mounted on the arm before adjusting. Adjust the arm closest to the monitor first.

ADJUST ELITE ARM

IMPORTANT!

The Elite MUST be fully extended before adjusting.

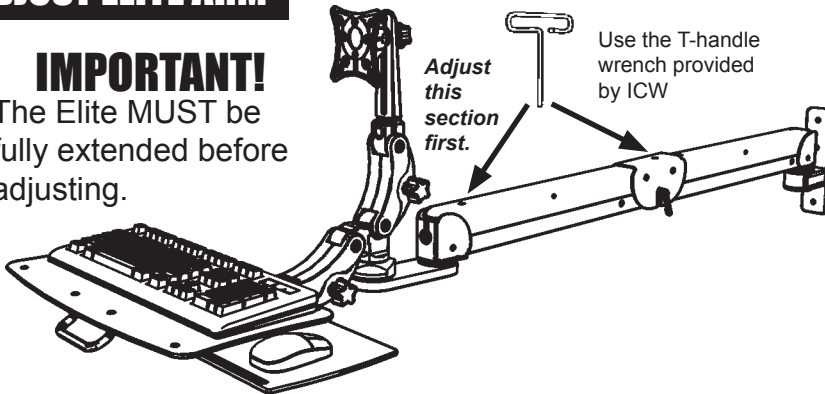


Extend the Elite straight out as shown before adjusting the arms resistance. Be sure all equipment is mounted on the arm before adjusting. Adjust the arm closest to the monitor first.

ADJUST ELITE ARM

IMPORTANT!

The Elite MUST be fully extended before adjusting.

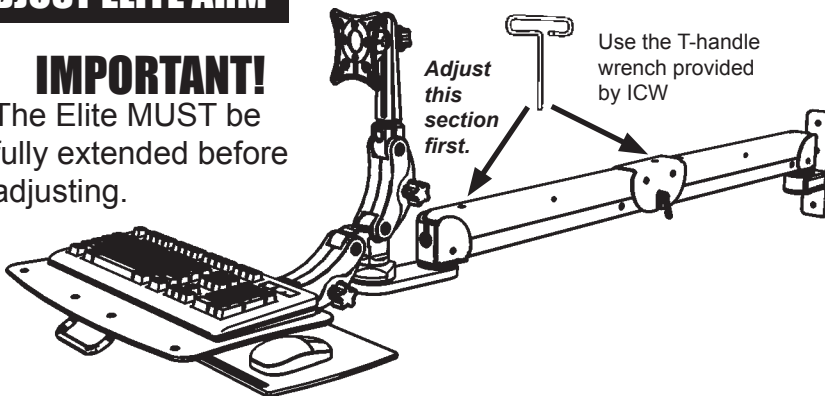


Extend the Elite straight out as shown before adjusting the arms resistance. Be sure all equipment is mounted on the arm before adjusting. Adjust the arm closest to the monitor first.

ADJUST ELITE ARM

IMPORTANT!

The Elite MUST be fully extended before adjusting.

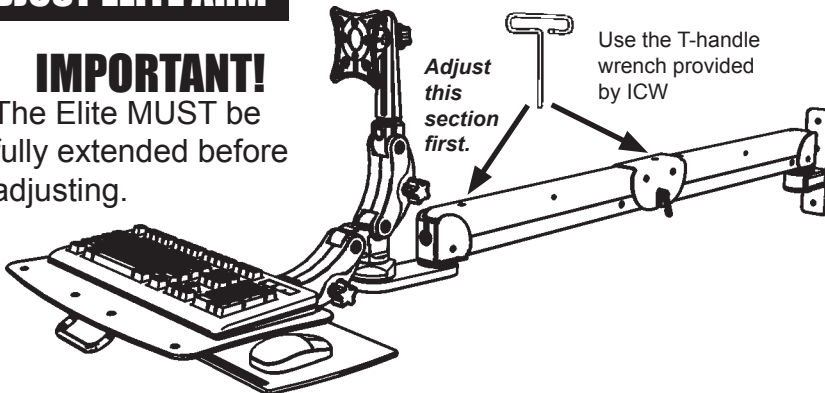

Extend the Elite straight out as shown before adjusting the arms resistance. Be sure all equipment is mounted on the arm before adjusting. Adjust the arm closest to the monitor first.