

ICW UNDERCABINET 500i & 560i MONITOR INSTALL


ICWUSA.com, Inc.

If you have any questions please call Toll Free 1-800-558-4435


UL500i-TS28 and UL560i-TS28

MAXIMUM LOAD CAPACITY: 18 LBS (8 KG)


MOUNT TRACK TO SURFACE

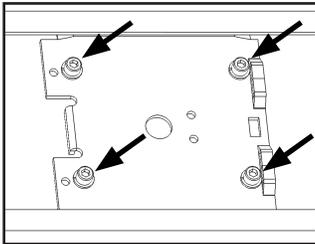

Remove the four socket head cap screws and lock washers located on the track.

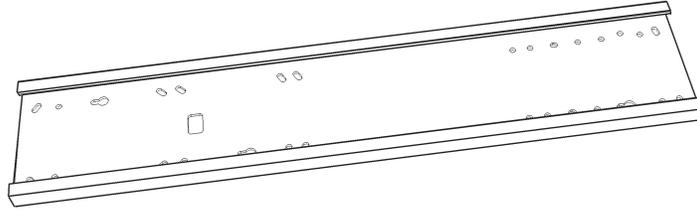

Install the TS28 track slider according to the **instructions provided in your hardware bag**.

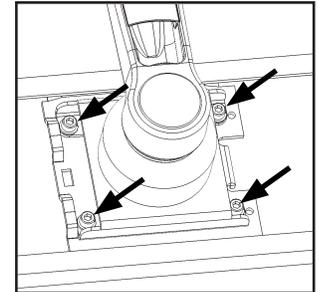


Using the four screws and lock washers removed in step 1, install the Slider Mount Assembly.

ATTACH MONITOR TO 500i

Attach ball VESA plate to monitor using the four 4mm screws in the hardware bag.

Remove beauty cap and screw from underside of Quick Disconnect.

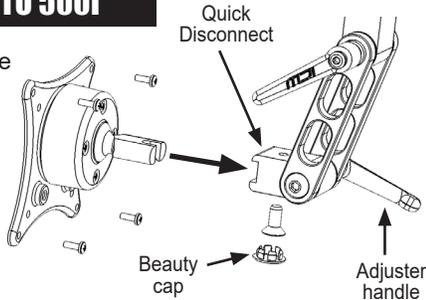


Slide VESA assembly into Quick Disconnect. Tighten screw with 5/16" hex key. Replace beauty cap.

Adjust monitor height and angle by loosening adjuster handles, moving monitor to desired position and tightening handles.

ATTACH MONITOR TO 560i

Attach ball VESA plate to monitor using the four 4mm screws in the hardware bag.

Remove beauty cap and screw from top side of Quick Link. Slide VESA assembly into Quick Link. Replace screw and tighten with 5/16" hex key. Replace beauty cap.

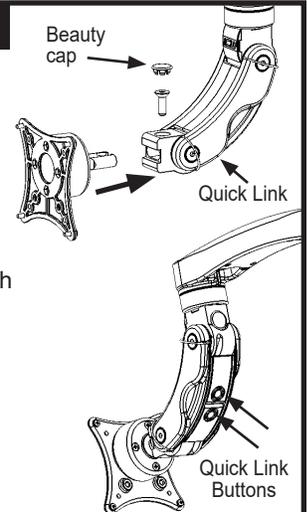


Adjust monitor height and angle by pressing buttons on Quick Link. Move monitor to desired position and release buttons.

ADJUST VESA TENSION & ROTATION

Adjust pivot tension of the ball by gently and evenly tightening or loosening the four screws on the back of the ball VESA.

The ball VESA enables monitor to tilt, pan left and right and rotate.

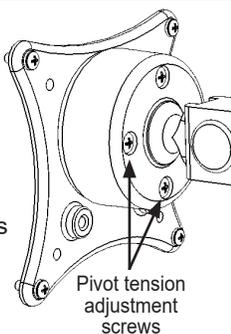


CABLE MANAGEMENT - ULTRA ARM

Prepare all cables to route inside the arm. Bundle together if necessary.

Remove cover on underside of arm by unscrewing four socket head cap screws. Screws are captured by the cover so they cannot fall out. Once screws are disengaged, pull cover out of arm.

Place cables within the channel. Do not block the holes where screws will engage in arm. Replace cover and tighten screws.

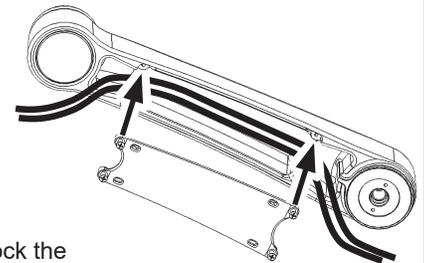

CLEANING OF THE ICW MOUNTING DEVICE

When cleaning your ICW mounting unit please follow the points below. Proper cleaning of the mounting device will help assure proper function and extend the life of the unit.

1. Any general cleaner is acceptable except degreasers are not recommended near the bearing entrances.
2. Spray cleaner or water on a soft cloth or paper towel and then wipe down the mounts.
3. Do not spray directly at the bearing seams (located at all swivel points) as this could reduce the life of the bearings.

NOTICE: ICWUSA.COM, Inc. provides the appropriate hardware fasteners to match the majority if not all standard monitors and devices. It is the responsibility of the installer / integrator to ensure that the screws and fasteners have the adequate thread engagement. The rule of thumb is that the thread depth is greater than the diameter of the hole or 4 full turns of 360 degrees of thread engagement. It is also the responsibility of the installer / integrator to ensure that they do not damage the monitor or device by using a screw or fastener that is too long for hole and therefore damaging the unit by inserting too far.