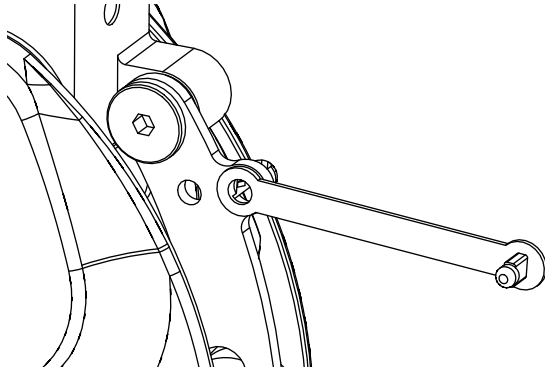
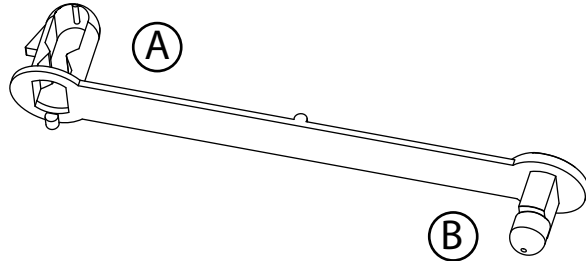
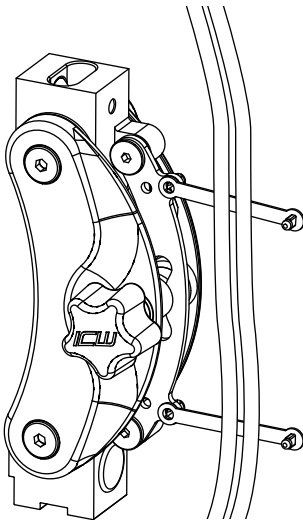
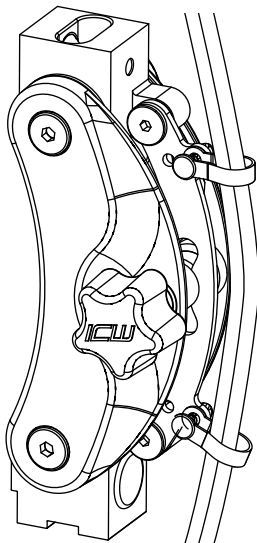


1

Place cable tie end "A" into hole of Paralink Locking Bar.

**2**

Place cables next to cable ties and ensure there is proper slack for devices to be adjusted.

3

Press cable tie end "B" into cable tie end "A"