


ICW UNDERCABINET MONITOR & TRAY

ICWUSA.com, Inc.


If you have any questions please call Toll Free 1-800-558-4435

ULBV-TS28-KUB-A1


MOUNT TRACK TO SURFACE

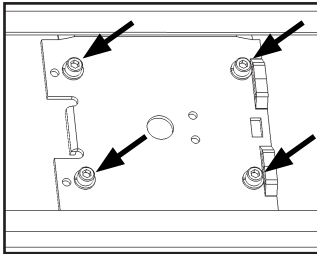

1. Remove the four socket head cap screws and lock washers located on the track.

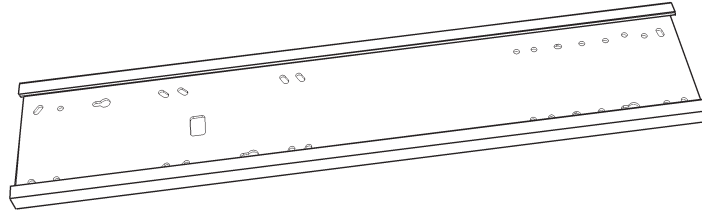


2. Install the TS28 Track Slider according to the INSTRUCTIONS PROVIDED IN YOUR HARDWARE BAG.

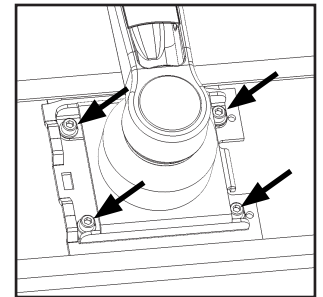


3. Using the four screws and lock washers removed in step 1, install the Slider Mount Assembly.

ATTACH MONITOR

- Remove bolts from back of pole clamp with 3/16" hex key and separate clamp halves.
- Attach VESA plate to monitor using 4mm screws in hardware bag.
- Reattach VESA assembly and clamp to pole. Tighten bolts.

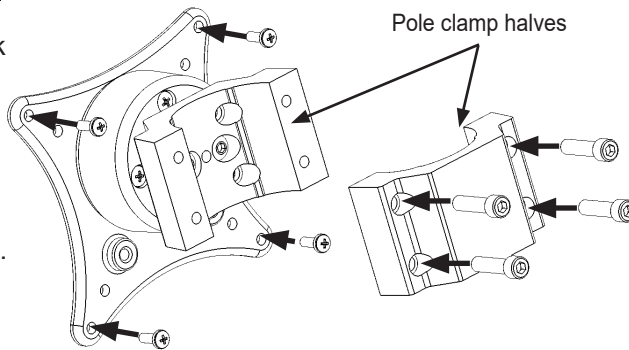

Pole clamp halves

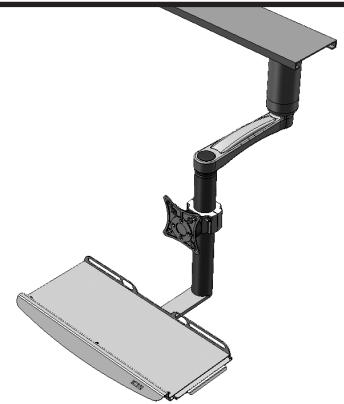


► **MAXIMUM LOAD CAPACITY: 28 LBS (12.7 KG)**

ADJUST VESA TENSION & ROTATION

Adjust pivot tension of the ball by gently and evenly tightening or loosening the four screws on the back of the ball VESA.

The ball VESA enables monitor to tilt, pan left and right and rotate.

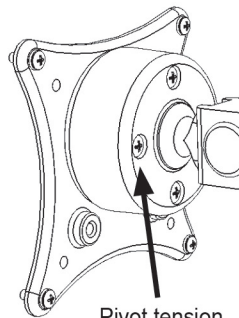


Pivot tension adjustment screws

ATTACH KEYBOARD TO DROP EXTENSION

Remove screws from drop extension using 5/32" hex key.

Align holes in keyboard tray with screw holes in drop extension.

Attach keyboard tray using the screws provided.

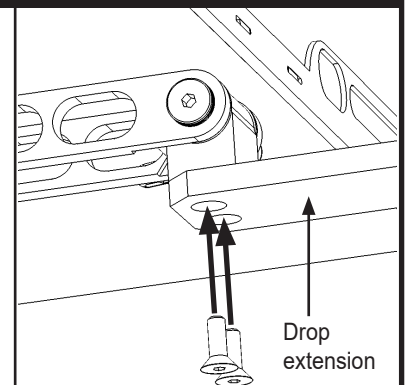

CLEANING OF THE ICW MOUNTING DEVICE

When cleaning your ICW mounting unit please follow the points below. Proper cleaning of the mounting device will help assure proper function and extend the life of the unit.

1. Any general cleaner is acceptable except degreasers are not recommended near the bearing entrances.
2. Spray cleaner or water on a soft cloth or paper towel and then wipe down the mounts.
3. Do not spray directly at the bearing seams (located at all swivel points) as this could reduce the life of the bearings.

NOTICE: ICWUSA.COM, Inc. provides the appropriate hardware fasteners to match the majority if not all standard monitors and devices. It is the responsibility of the installer / integrator to ensure that the screws and fasteners have the adequate thread engagement. The rule of thumb is that the thread depth is greater than the diameter of the hole or 4 full turns of 360 degrees of thread engagement. It is also the responsibility of the installer / integrator to ensure that they do not damage the monitor or device by using a screw or fastener that is too long for hole and therefore damaging the unit by inserting too far.